

946 Plantation Way, Montgomery, AL 36117

800-278-4480




Please take the time to locate and identify each part. Assemble the units on a smooth flat surface. It is also helpful to lay the tops and seats on cardboard or a drop cloth to prevent scratching of the surface during assembly. All parts have been pre-cut and pre-drilled for ease of assembly. All holes are slotted to allow for easy assembly and for final levelling of tops and seats to frames. Fully assembly all parts without totally tightening nuts and bolts. After all assembled go back and retighten nuts to bolts. DO NOT OVER TIGHTEN NUTS TO BOLTS. Over tightened nuts can crack the plastisol coating. All the necessary quantities of parts required are listed in this assembly instruction.

DO NOT BEGIN ASSEMBLY UNTIL YOU HAVE READ THESE INSTRUCTIONS AND ARE FAMILIAR WITH THE PARTS.



946 Plantation Way, Montgomery, AL 36117


800-278-4480

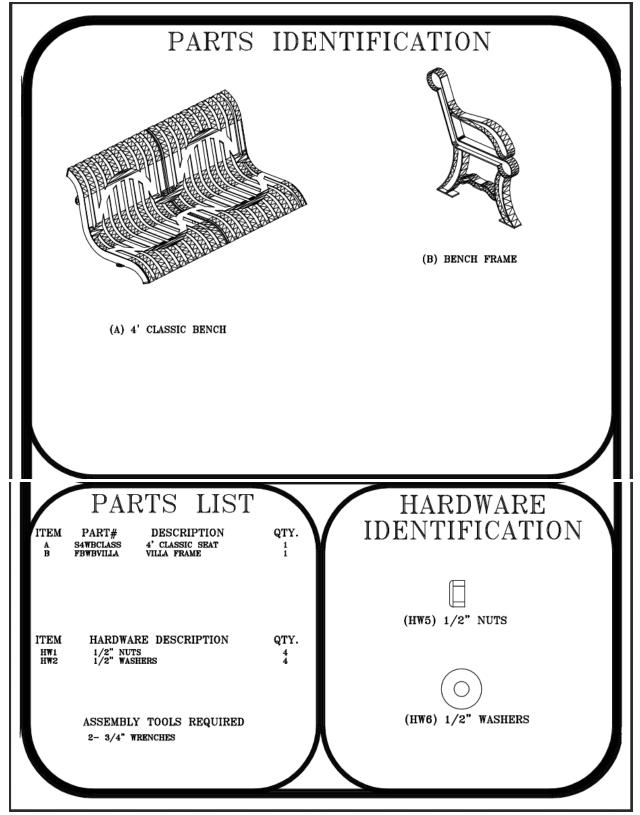

CSF COMMERCIAL SITE FURNISHINGS

946 Plantation Way, Montgomery, AL 36117

800-278-4480

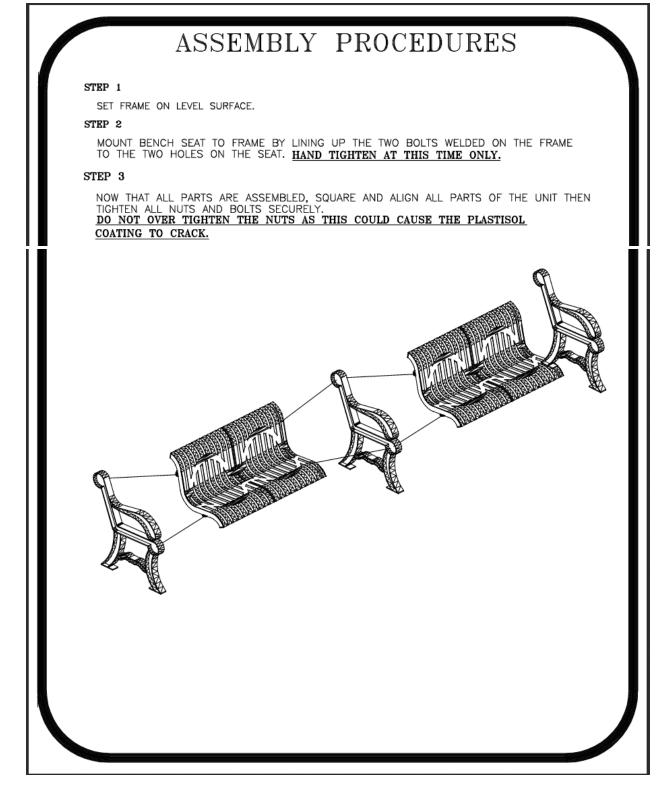

CSF COMMERCIAL SITE FURNISHINGS

946 Plantation Way, Montgomery, AL 36117

800-278-4480

